



Disconnects

Description

iAIRE takes a customer supplied unit and provides and installs a fused or non-fused disconnect.

Part Numbers

ITEM	PART #	NOTES
240V - 30A fuse	DISC-F240-30 INSTALL	
240V - 60A fuse	DISC-F240-60 INSTALL	
240V - 100A fuse	DISC-F240-100 INSTALL	
240V - 150A fuse	DISC-F240-150 INSTALL	
240V - 200A fuse	DISC-F240-200 INSTALL	
240V - 300A fuse	DISC-F240-300 INSTALL	
240V - 30A switch	DISC-S240-30 INSTALL	
240V - 60A switch	DISC-S240-60 INSTALL	
240V - 100A switch	DISC-S240-100 INSTALL	
240V - 150A switch	DISC-S240-150 INSTALL	
240V - 200A switch	DISC-S240-200 INSTALL	
240V - 300A switch	DISC-S240-300 INSTALL	
600V - 30A fuse	DISC-F600-30 INSTALL	
600V - 60A fuse	DISC-F600-60 INSTALL	
600V - 100A fuse	DISC-F600-100 INSTALL	
600V - 150A fuse	DISC-F600-150 INSTALL	
600V - 30A switch	DISC-S600-30 INSTALL	
600V - 60A switch	DISC-S600-60 INSTALL	
600V - 10A switch	DISC-S600-100 INSTALL	
600V - 150A switch	DISC-S600-150 INSTALL	