



Temperature Control of VFD

Part Number

ITEM	PART #
Temperature VFD control - field installation	CNT-SUPPLYTEMP

Description

This controller with a discharge air temperature sensor is designed to control a VFD on the supply fan in an HVAC unit so that the VFD will maintain a constant discharge air temperature. This option does not include a VFD.

Part Number

ITEM	PART #
Temperature VFD control - factory installed	CNT-SUPPLYTEMP INSTALL

Description

Installs the controller with a discharge air temperature sensor in a customer provided unit at the iAIRE factory.