

## MIRE

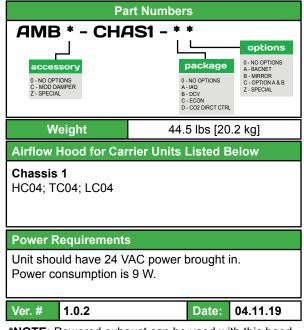


\*NOTE: Powered exhaust can be used with this hood.

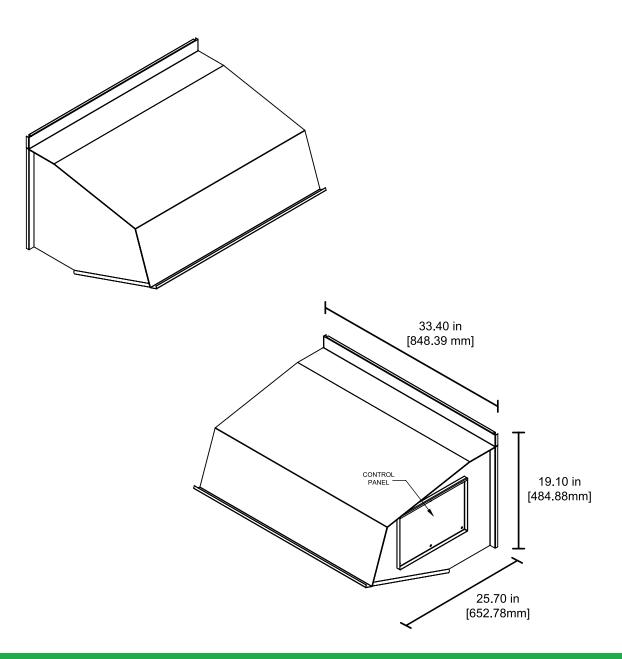

## **Wiring Diagram**

Version 1.1 - 11/27/2013

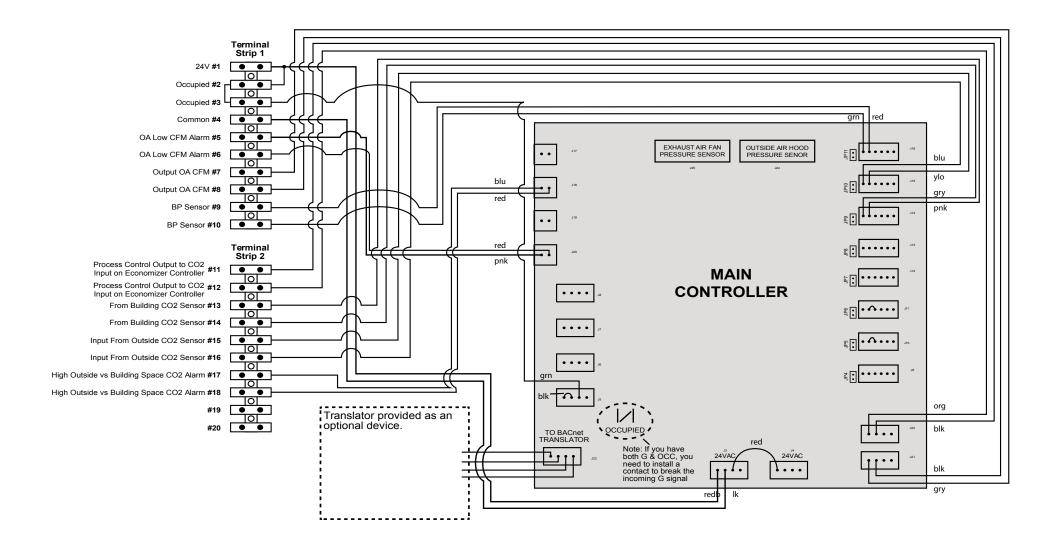

Terminal Strip 1

## Technical Detail - Terminal Strip & I/O

PIN	NAME	IN / OUT	TYPE
T1-1	24V	INPUT	LINE VOLTAGE
T1-2	OCCUPIED	INPUT	DIGITAL
T1-3	OCCUPIED	INPUT	DIGITAL
T1-4	COMMON	INPUT	LINE VOLTAGE
T1-5	OA LOW CFM ALARM	OUTPUT	DIGITAL
T1-6	OA LOW CFM ALARM	OUTPUT	DIGITAL
T1-7	OUTPUT OA CFM	OUTPUT	ANALOG 0-10V
T1-8	OUTPUT OA CFM	OUTPUT	ANALOG 0-10V
T1-9	BP SENSOR	INPUT	ANALOG 0-10V
T1-10	BP SENSOR	INPUT	ANALOG 0-10V
T2-11	PROCESS CONTROL OUTPUT TO CO2 INPUT ON ECONOMIZER CONTROLLER	OUTPUT	ANALOG 0-10V
T2-12	PROCESS CONTROL OUTPUT TO CO2 INPUT ON ECONOMIZER CONTROLLER	OUTPUT	ANALOG 0-10V
T2-13	FROM BUILDING CO2 SENSOR	INPUT	ANALOG 0-10V
T2-14	FROM BUILDING CO2 SENSOR	INPUT	ANALOG 0-10V
T2-15	INPUT FROM OUTSIDE CO2 SENSOR	INPUT	ANALOG 0-10V
T2-16	INPUT FROM OUTSIDE CO2 SENSOR	INPUT	ANALOG 0-10V
T2-17	HIGH OUTSIDE VS BUILDING SPACE CO2 ALARM	OUTPUT	DRY CONTACT
T2-18	HIGH OUTSIDE VS BUILDING SPACE CO2 ALARM	OUTPUT	DRY CONTACT
T2-19	NOT USED	N/A	N/A
T2-20	NOT USED	N/A	N/A

24V <b>#1</b>	• •
Occupied #2	
Occupied #3	
Common #4	
OA Low CFM Alarm #5	
OA Low CFM Alarm #6	
Output OA CFM #7	
Output OA CFM #8	
BP Sensor #9	
BP Sensor #10	
	Terminal Strip 2
Process Control Output to CO2 Input on Economizer Controller #11	
Input on Economizer Controller #11  Process Control Output to CO2 #12	
Input on Economizer Controller #11 Process Control Output to CO2 #12 Input on Economizer Controller	
Input on Economizer Controller #11 Process Control Output to CO2 #12 Input on Economizer Controller From Building CO2 Sensor #13	
Input on Economizer Controller #11 Process Control Output to CO2 #12 Input on Economizer Controller From Building CO2 Sensor #13 From Building CO2 Sensor #14	Strip 2
Input on Economizer Controller #11 Process Control Output to CO2 #12 Input on Economizer Controller From Building CO2 Sensor #13 From Building CO2 Sensor #14 Input From Outside CO2 Sensor #15	Strip 2
Input on Economizer Controller #11 Process Control Output to CO2 #12 Input on Economizer Controller From Building CO2 Sensor #13 From Building CO2 Sensor #14 Input From Outside CO2 Sensor #15 Input From Outside CO2 Sensor #16	Strip 2
Input on Economizer Controller #11 Process Control Output to CO2 #12 Input on Economizer Controller From Building CO2 Sensor #13 From Building CO2 Sensor #14 Input From Outside CO2 Sensor #15 Input From Outside CO2 Sensor #16 High Outside vs Building Space CO2 Alarm #17	Strip 2

<sup>\*</sup> Any 0-10V signal can be modified to be a 4-20 mA signal. See instructions for how to make this modification.